Carbon-Ti X-Hub SP Center Lock X-12 N3W 24

ITALIANO

DESTINAZIONE
X-Hub SP Center Lock X-12 N3W è un prodotto molto leggero e sofisticato ed è rivolto ad un utilizzo road o offroad. La garanzia decade in caso di utilizzo su biciclette elettriche a pedalata assistita (E-bike).

COMPATIBILITA' E CONVERSIONE
X-Hub SP Center Lock X-12 N3W presenta un ad asse passante da 12mm, il fissaggio del disco adotta sistema center lock con licenza Shimano. Compatibile esclusivamente con lockring per assi passanti 15/20 mm (es. Shimano SM-HB20). Questo mozzo è compatibile con cassette pignoni Campagnolo N3W (es. Campagnolo Ekar 13s). Cassette Campagnolo 12 e 11* velocità possono essere montate tramite l'adattatore comprensivo di relativa ghiera (Campagnolo N3W adapter kit).
*Le cassette 11s richiedono un ulteriore "X-Campy 11s spacer kit" fornito in optional da Carbon-Ti.

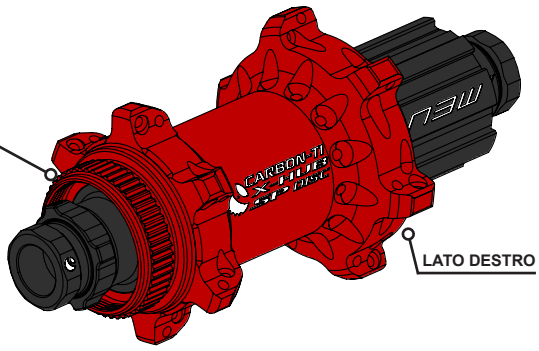

fig.A

CARATTERISTICHE TECNICHE
X-Hub SP Center Lock X-12 N3W presenta raffinatezze meccaniche e un rapporto rigidezza/peso ai massimi livelli, il corpo è lavorato dal pieno ed alleggerito minuziosamente tramite macchine CNC, la meccanica presenta un asse da 17 millimetri a sezione variabile su cui sono montati cuscinetti sigillati di altissima qualità con sistema di precarico esterno. La meccanica della ruota libera è protetta da una guarnizione a labbro ed è affidata ad una ghiera in titanio a 56 denti con quattro punti di ingaggio.

INFORMAZIONI PER L'ASSEMBLAGGIO DELLA RUOTA
Il mozzo 24 fori presenta flange che indirizzano i raggi ad un andamento predefinito di allacciamento con incrocio in seconda.
Si raccomanda di raggiare le ruote in modo che i raggi non siano a contatto negli incroci, per non sottoporre le flange a torsioni anomale e per evitare rumori provocati dall'attrito tra essi.
Tensione dei raggi raccomandata: 110-120 (Max) Kgf
Serraggio max lockring fissaggio disco: 40 Nm

DIMENSIONI
N° fori per raggi: 24
Diametro fori: Ø 2.5 mm
Foratura lato disco: Ø 48 mm
Foratura lato destro: Ø 54.50 mm
Diametro asse: 17 mm
Battuta asse= 142 mm
Tipo bloccaggio: Asse 12 mm
Compatibilità disco: center lock con licenza Shimano

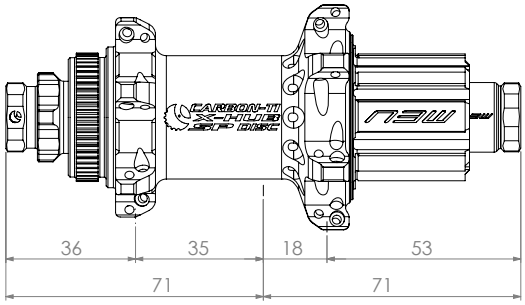

fig.B
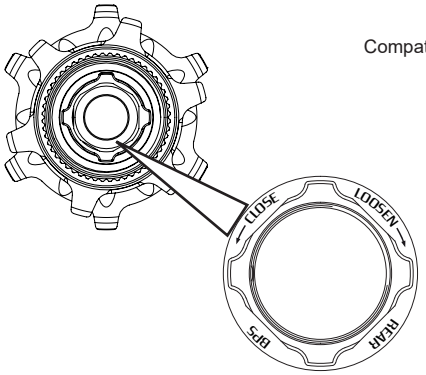

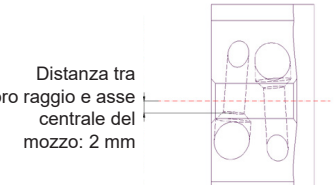

REGOLAZIONE BEARING PRELOAD SYSTEM (BPS)
Il registro esterno di precarico dei cuscinetti (cod. XHSPCLRADLMN)
è azionabile con due sole dita. Mai usare pinze o altri utensili.
Il mozzo viene consegnato perfettamente regolato dalla fabbrica, dunque non modificare il precarico se non necessario. La regolazione del precarico si rende eventualmente opportuna quando la ruota, regolarmente installata nel telaio, presenta un evidente gioco laterale o risulta molto frenata. Dopo aver allentato il grano (parte n°6), ruotandolo in senso antiorario con una chiave esagonale da 1,5 mm, in caso di gioco agire sulla ghiera di regolazione in senso antiorario (CLOSE). Nel caso in cui la ruota sia troppo frenata, ruotare la ghiera in senso orario (LOOSEN). Ad operazioni concluse, serrare nuovamente il grano. La regolazione è ottimale quanto la ruota non presenta un gioco laterale evidente e scorre fluida fino all'arresto. Una regolazione scorretta del BPS, invece, potrebbe compromettere la performance del mozzo fino a danneggiare i cuscinetti. Qualora la regolazione del BPS non fosse sufficiente a recuperare la piena efficenza del mozzo, è consigliabile la sostituzione dei cuscinetti.
Fare eseguire tale operazione esclusivamente a personale qualificato ed utilizzare ricambi originali Carbon-Ti.

SMONTAGGIO, PULIZIA E LUBRIFICAZIONE
Il mozzo può essere aperto facilmente, ruotando la chiusura asse (cod.XHRCLN3WMN) in senso antiorario fino al suo completo svitamento. Si consiglia l'utilizzo di una coppia di chiavi a bussola esagonale da 18 mm per non danneggiarne il profilo. Successivamente sfilare l'asse (cod.XHMSPRAXX12MN), eventualmente pichiettando delicatamente con l'ausilio di un martello in gomma. Sfilare il corpo della ruota libera, pulire e verificare lo stato di usura della guarnizione a labbro (cod. GL34-44.3), dei denti (cod. XHDT4L) e della ghiera in titanio (cod. XHRT56). Qualora si rilevasse che tali componenti risultassero troppo usurati, provvedere alla sostituzione.
Svitare completamente la ghiera del BPS, pulire i filetti e verificare le condizioni degli stessi. Pulire e verificare lo stato dei cuscinetti, sostituendoli qualora presentassero evidenti segni di usura. L'inserimento dei cuscinetti va eseguito esclusivamente mediante l'utilizzo di attrezzi per montaggio cuscinetti professionale (pressa).

RIMONTAGGIO
Riavvitare la ghiera BPS sino alla posizione di fine corsa, inserire l'asse nella sede dei cuscinetti, posizionare il corpo ruota libera prestando attenzione che i denti si inseriscano correttamente nella ghiera in titanio. Se necessario, compiere l'operazione con l'ausilio del martello di gomma. Serrare con chiave dinamometrica la chiusura (cod.XHRCLN3WMN) ad una coppia di 8 Nm. Accertarsi che il cuscinetto destro della ruota libera sia correttamente a battuta con la chiusura dell'asse (cod.XHRCLN3WMN), dopodichè avvitare manualmente il BPS in senso antiorario sino alla corretta registrazione
(vedi REGOLAZIONE BEARING PRELOAD SYSTEM).

NUMERO	CODICE	DESCRIZIONE	QTA'
1	XHSPCLFBD24	X-Hub SP Center Lock corpo posteriore 24 fori	1
2	61803-2RS1	Cuscinetto 17x26x5 61803-2RS1	3
3	61903-2RS1	Cuscinetto 17x30x7 61903-2RS1	1
4	XHMSLRAXX12MN	Asse X-Hub MTB X-12	1
5	XHSPCLRADLMN	Regolatore di precarico center lock con grano	1
6	XHRCLN3WMN	X-Hub Disc 12 mm chiusura N3W	1
7	XHFWN3WMN	Ruota libera N3W	1
8	XHDST04PA66	Rasamento PA66 22x17x0,4mm	1
9	CTML	Molla per ruota libera X-Hub	4
10	XHDT4L	Dentino lucidato per ruota libera X-Hub 4mm	4
11	GL34-44.3	Guarnizione a triplo labbro X-Hub	1
12	HSS3x3	Grano M3x3 in inox	1
13	XHRT56	Ghiera dentata X-Hub Ti Gr.5 56T	1
14	XHS25	Distanziale corpo ruota libera	1
15	VHM-26	Anello di tenuta 26 mm	1
16	XHEFWSP	Distanziale esterno ruota libera	1

fig.C
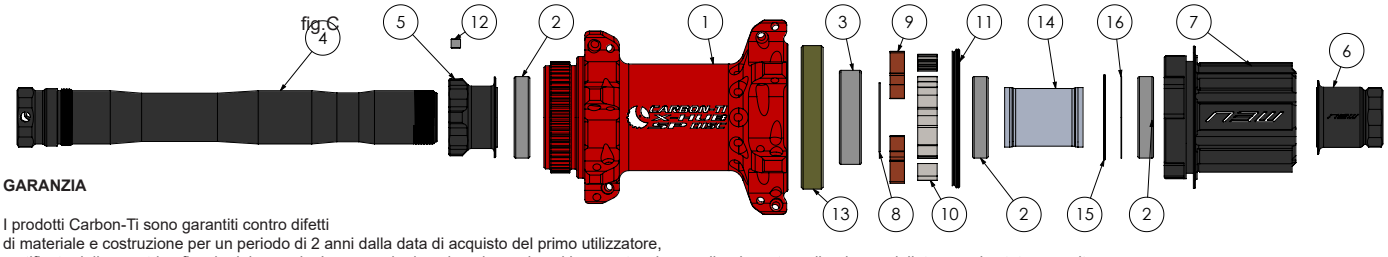

GARANZIA

I prodotti Carbon-Ti sono garantiti contro difetti
di materiale e costruzione per un periodo di 2 anni dalla data di acquisto del primo utilizzatore,
certificata dallo scontrino fiscale del negozio. La garanzia decade nel caso in cui la manutenzione ordinaria o straordinaria consigliata non sia stata eseguita.
In caso di vizio, Carbon-Ti si impegna ad effettuare la sostituzione o la riparazione, a sua discrezione dell'elemento riconosciuto difettoso.
Per essere accettato, il difetto deve essere comunicato dal primo proprietario al proprio rivenditore e da quest'ultimo, dopo averlo verificato, alla Carbon-Ti.
La garanzia non copre i danni risultanti da trasporto, giacenza, incidenti, negligenze, colpi o cadute, mancato rispetto delle informazioni del libretto istruzioni, montaggio errato o con prodotti non compatibili, cattiva manutenzione, usura normale, modifiche o alterazioni del prodotto. La Garanzia non copre le parti soggette a normale usura come i cuscinetti.

Carbon-Ti X-Hub SP Center Lock X-12 N3W 24 è 100% made in Italy

Via privata G. Castellini, 27 25046 Cazzago S.Martino (Brescia) – ITALY
Web site: http://www.carbon-ti.com Email: info@carbon-ti.com

Scansionare per accedere al video di manutenzione dei mozzi Center Lock

Sostituzione cuscinetti ruota libera N3W

ITALIANO

Le operazioni di manutenzione e di sostituzione dei cuscinetti richiedono un'adeguata esperienza e attrezzatura tecnica, diversamente vi consigliamo di rivolgervi presso un meccanico qualificato consegnandogli questo manuale tecnico.
E' fortemente consigliato l'utilizzo di una pressetta per l'inserimento dei cuscinetti (tipo barra filettata con dischetti adeguatamente dimensionati), un piccolo cacciavite piatto e grasso per cuscinetti (Fig.D).
Carbon-Ti utilizza e consiglia esclusivamente cuscinetti SKF di tipo 2RS1, l'utilizzo di ricambi non originali o cuscinetti di qualità inferiore ridurrà le performance e l'affidabilità dei vostri mozzi.

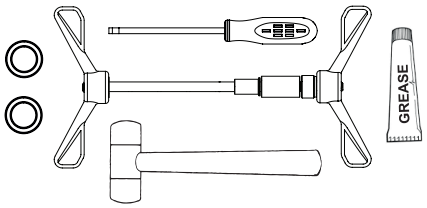

fig.D

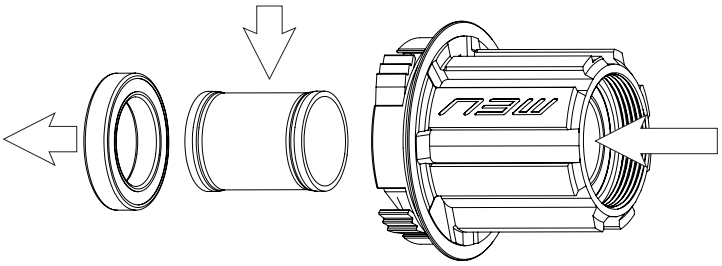

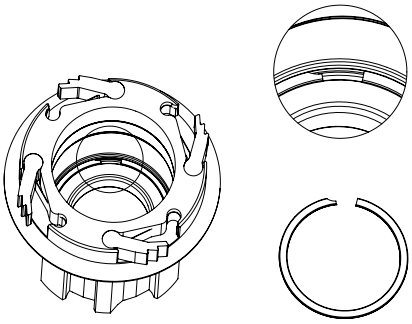

1- Spostare lateralmente il distanziale in modo che si disassi e consenta rimuovere cuscinetto sinistro, picchiandolo dall'interno del corpetto. Rimuovere il distanziale.

2- Rimuovere l'anello di sicurezza con l'aiuto di un piccolo cacciavite a testa piatta

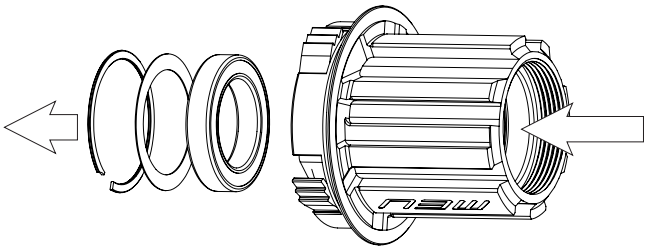

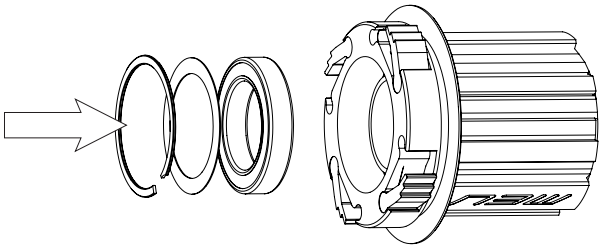

3- Estrarre il cuscinetto destro dal lato sinistro del corpetto. Fare attenzione, non può uscire dal lato destro!

4- Inserire un nuovo cuscinetto destro dal lato sinistro premendolo sull'anello esterno

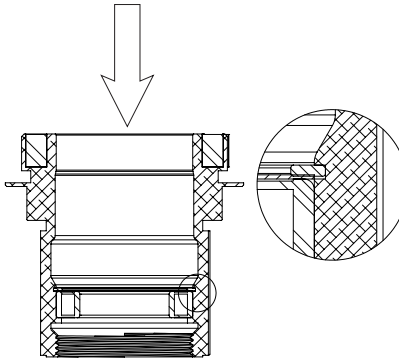

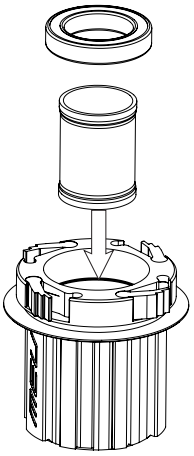

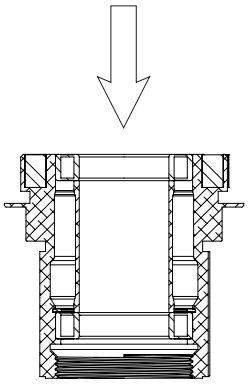

5- Posizionare la ruota libera su un piano di appoggio stabile con il filetto rivolto verso il basso come in figura ed inserire il rasamento plastico e l'anello di sicurezza nel suo alloggiamento premendolo con una bussola di diametro adeguato. (si consiglia di utilizzare un anello nuovo)

6- Inserire ed allineare il distanziale in asse con i cuscinetti

7- Installare il cuscinetto sinistro premendolo sull'anello interno ed esterno, facendo attenzione a sostenere l'anello interno del cuscinetto destro con l'axle end.

Via privata G. Castellini, 27 25046 Cazzago S.Martino (Brescia) – ITALY
Web site: http://www.carbon-ti.com Email: info@carbon-ti.com

Carbon-Ti X-Hub SP Center Lock X-12 N3W 24

ENGLISH

DESTINATION
X-Hub SP Center Lock X-12 is a very light and sophisticated product and it is intended for Road or Offroad use. Warranty voids when used on an electric-assisted bicycle (E-bike).

COMPATIBILITY AND CONVERSION
X-Hub SP Center Lock X-12 is 12 mm thru axle, the fixing system is center lock rotor mounting system licensed by Shimano. Compatible with 15/20 mm thru axle only lockring.
This Hub is compatible with N3W cassettes (Eg. Campagnolo Ekar 13s).
Cassettes 12 and 11* speed can be mounted through the use of an adapter with lockring.
*Campagnolo 11s cassettes require an addictional "X-Campy 11s spacer

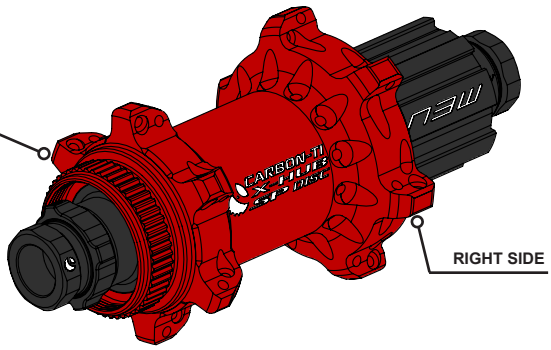

fig.A

FEATURES
X-Hub SP Center Lock X-12 presents refinements and a mechanical stiffness/weight ratio at the highest level, the Al7075-T6 body is machined from solid and is lightened by meticolous works with CNC machines. The Al7075-T6 17 mm diameter axle has a variable thickness, two high quality sealed bearings, with an external preload system that provide reliability and smoothness.
The freewheel mechanism is protected by a lip seal and it is provided by a titanium toothed ring to 56 teeth, with four points of engagement.

INFORMATION FOR THE WHEEL BUILDING
The 24-hole hub has flanges that determine a predefined 2-cross spoking pattern.
It is recommended to lace the wheels so that the spokes don't have friction between them at the crossing to avoid abnormal torsion of the flanges and noise.
Recommended spoke tension: 110-120 (Max) Kgf
Maximum lockring tightening torque: 40 Nm

SPECIFICATIONS
Spoke hole drilling: 24
Spoke hole: Ø 2.5 mm
Disc flange drilling: Ø 48 mm
Right flange drilling: Ø 54.50 mm
Axle diameter: 17 mm
Axle width: 142 mm
Frame attachment: 12mm thru axle
Disk attachment: center lock rotor mounting system licensed by Shimano

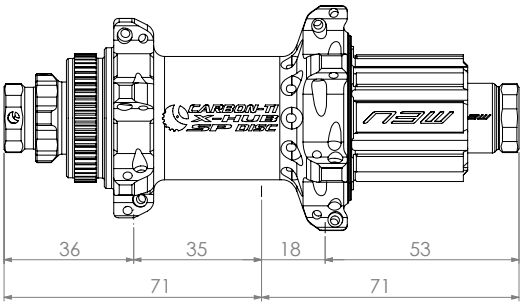

fig.B

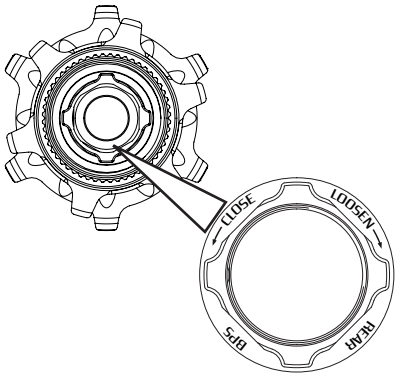

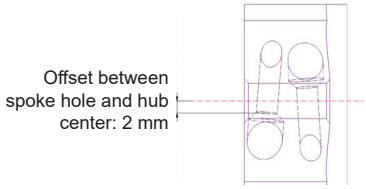

BEARING PRELOAD SYSTEM TUNING (BPS)
The external Bearing Preload System (cod. XHSPCLRADLMN) is operable with only two fingers.
Never use pliers or other tools. The hub comes perfectly tuned from the factory so do not modify the preload if not necessary.The preload adjustment may be needed when the wheel, properly installed in the frame, has an evident side play or the rotation is not smooth enough. In case of play, after loosening the grub screw (part n°6) with a 1,5 mm hex key, turn the Bearing Preload System (BPS) in a counterclockwise direction (CLOSE). In case the rotation is not smooth enough, turn clockwise (LOOSEN). Tighten the grub screw. The setting is optimal when the wheel does not have any evident side play and rolls excellently. An improper adjustment of the BPS, however, could adversely affect the performance of the hub and damage the bearings. If the adjustment of the BPS is not enough to recover the full efficiency of the hub, it is advisable to replace the bearings. This work must be done only by skilled mechanics, using original Carbon-Ti spare parts.

DISASSEMBLY, CLEANING AND LUBRICATION
The hub can be easily opened inserting two 18 mm wrench tools in the axle sides, turning counterclockwise until the complete loosening of the axle end (cod. XXHRCLN3WMN). Then remove the axle (cod. XHMSPRAXX12MN), possibly gently hitting with a rubber mallet. Pull and remove the freewheel body, clean and check the state of wear of the lip seal (cod. GL34-44.3), the pawls (cod. XHDT4L) and toothed titanium ring (cod. XHRT56). Replace them if they appear too much worn or damaged. Lubricate with grease the pawls seats and the toothed titanium ring, and with oil the lip seal.
Unscrew the BPS completely, clean and lubricate with grease the threads and check their condition.
Clean and check the condition of bearings and replace them if they are damaged.
The insertion of the bearings should be exclusively done with professional tools for bearings mounting (bearing cup press).

REASSEMBLY
Turn the BPS to the end position, insert the axle into the bearings housing, after lubricating with grease, maybe using a rubber mallet. Insert the freewheel body, making sure that the pawls perfectly fit in the titanium toothed ring. Tighten the axle end with a torque wrench (cod.XHRCLN3WMN) to a 8 Nm torque.
Be sure that the right bearing is accurately placed against the axle end (cod.XHRCLN3WMN), then turn the BPS counterclockwise until the proper adjustment (see BEARING PRELOAD SYSTEM TUNING).

NUMBER	CODE	DESCRIPTION	QTY
1	XHSPCLFBD24	X-Hub SP Center Lock rear body 24 holes	1
2	61803-2RS1	61803 2RS1 17x26x5 bearing	3
3	61903-2RS1	61903 2RS1 17x30x7 bearing	1
4	XHMSLRAXX12MN	X-Hub X-12 Axle	1
5	XHSPCLRADLMN	Preload adjuster center lock locked	1
6	XHRCLN3WMN	X-Hub Disc 12 mm N3W axle end	1
7	XHFWN3WMN	Freewheel body N3W	1
8	XHDST04PA66	Spacer PA66 22x17x0,4 mm	1
9	CTML	Freewheel Spring	4
10	XHDT4L	Freewheel PAwl X-Hub 4mm	4
11	GL34-44.3	Triple lip seal	1
12	HSS3x3	M3x3 inox grub screw	1
13	XHRT56	Ti Gr.5 Toothed Rlng 56T	1
14	XHS25	Freewheel spacer	1
15	VHM-26	Retaining ringo 26mm	1
16	XHEFWSP	External freewheel spacer	1

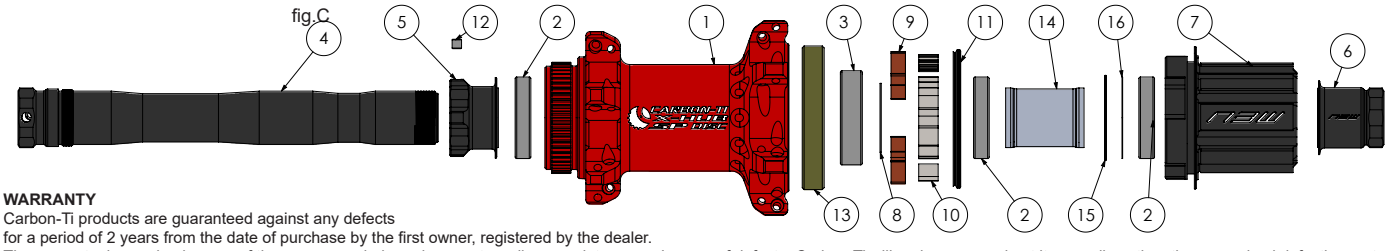

fig.C

WARRANTY
Carbon-Ti products are guaranteed against any defects
for a period of 2 years from the date of purchase by the first owner, registered by the dealer.
The warranty decays in absence of the recommended regular or extraordinary maintenance. In case of defects, Carbon-Ti will replace or repair, at its own discretion, the recognized defective part. To be accepted, the defect must be communicated to Carbon-Ti through the dealer/importer after his own control. If Carbon-Ti checking reveals that the damage is due to one of the reasons mentioned in the following paragraph, the replacement won't be accepted and the defective item will be sent back to the owner at his own charge. The guarantee does not cover damage resulting from transportation, warehousing, accidents, negligence, impact or falls, non-compliance with the information in the instruction manuals, assembly errors and assembly using non-compatible products, bad maintenance, modifications or alterations of the product.
The guarantee does not cover parts and components subject to normal wear, such as bearings.

Carbon-Ti X-Hub SP Center Lock X-12 N3W 24 is 100% made in Italy

Via privata G. Castellini, 27 25046 Cazzago S.Martino (Brescia) – ITALY
Web site: http://www.carbon-ti.com Email: info@carbon-ti.com

Scan this QR code to watch the X-Hub Center Lock maintenance video

N3W free wheel bearing replacement

ENGLISH

The maintenance and bearings replacement operations require adequate experience and technical equipment, otherwise we advise you to contact a qualified mechanic by handing him this technical manual.
We strongly recommend the use of a bearing press for inserting the bearings (threaded bar type with suitably sized disks), a small flat-head screwdriver and bearing grease (Fig.D).
Carbon-Ti mount and recommends only SKF type 2RS1 bearings, the use of non-original spare parts or lower quality bearings will reduce the performance and reliability of your hubs.

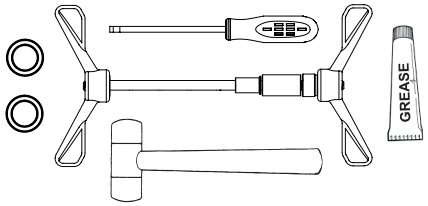

fig.D

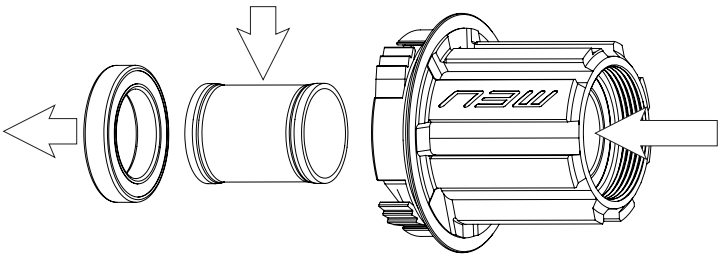

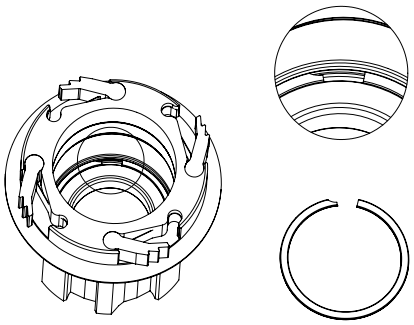

1- Move the spacer sideways, so that it moves off and allows you to remove the left bearing by hitting it from the internal part of the driver body. Remove the spacer.

2- Remove the retaining ring with the help of a small flat-head screwdriver

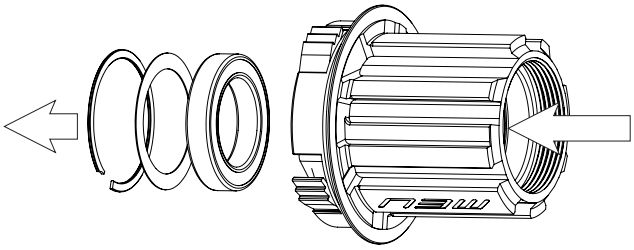

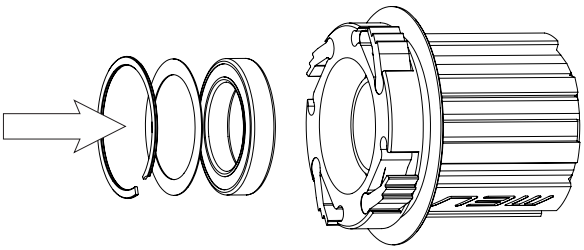

3- Bring the right bearing out from the left side, be careful it can't exit from the right side!

4- Insert the right bearing by beating and pressing the outer ring

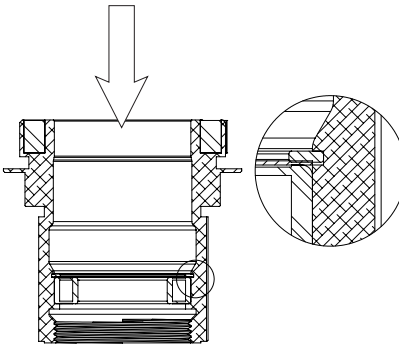

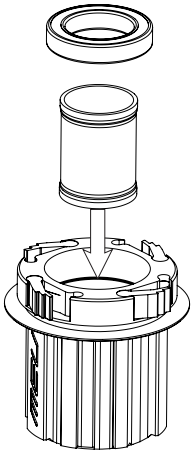

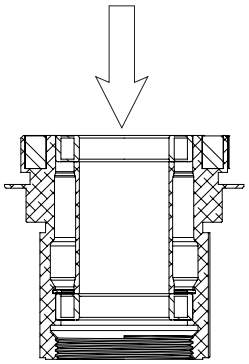

5- Place the freewheel on a stable support surface with the thread facing downwards as shown in the figure, and insert the plastic shim and the retaining ring into its housing by pressing it with a suitable diameter socket (we recommend using a new ring).

6- Insert and align the spacer in the bearings axis

7- Install the left bearing by pressing on both inner and outer ring, being careful of supporting the inner ring of the external bearing with the axle end.

Via privata G. Castellini, 27 25046 Cazzago S.Martino (Brescia) – ITALY
Web site: http://www.carbon-ti.com Email: info@carbon-ti.com