




# Carbon-Ti

## Asse passante anteriore X-Lock 12 e 15 mm

**ITALIANO**

*Vi ringraziamo per aver acquistato un prodotto Carbon-Ti, eventuali piccole imperfezioni estetiche sono da imputarsi alla realizzazione manuale dello stesso e contribuiscono ad esaltarne la natura artigianale.*

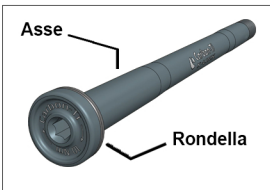

### Prima di iniziare

Gli assi passanti anteriori da 12 e 15 mm sono disponibili in diversi standard. Verificare che il modello acquistato sia compatibile con la vostra forcella nella relativa pagina di prodotto del sito [www.carbon-ti.com](http://www.carbon-ti.com).

### Installazione

Verificare che le sedi di inserimento nella forcella siano perfettamente pulite. Lubrificare la superficie dell'asse con del grasso al litio o per cuscinetti. Posizionare la rondella antigripante sotto la testa della vite come in figura. Inserire la ruota nella forcella ed infilare l'asse, avvitandolo in senso orario con una chiave esagonale da 5 mm (non fornita in dotazione) con una coppia di serraggio pari a 10 Nm. Verificare periodicamente il corretto serraggio dell'asse.



L'asse passante anteriore  
X-Lock 12 e 15 mm  
è 100% Made in Italy

**Carbon-Ti**

by LLS Titanium srl

Via per Ospitaletto, 147  
25046 Cazzago S.Martino  
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

Sito web: <http://www.carbon-ti.com>

e-mail: [info@carbon-ti.com](mailto:info@carbon-ti.com)




**Carbon-Ti**

## **X-Lock 12 & 15 mm front Thru Axle**

### **ENGLISH**

*Thank you for purchasing a Carbon-Ti product, any small aesthetic imperfection is due to the handmade manufacturing and contributes to exalt the handcrafted nature.*

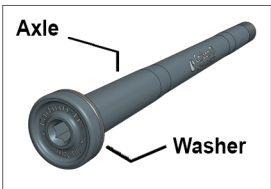

### **Before you start**

X-Lock 12 & 15 mm thru axles are available in several standards. Make sure that your model is compatible with your fork to the correspondent product page of the site [www.carbon-ti.com](http://www.carbon-ti.com).

### **Installation**

Verify that the slots of the fork are perfectly clean.

Lubricate the surface of the axle with lithium or bearing grease.

Put the anti-seize washer under the bolt head as shown in picture.

Install the wheel into the fork and insert the axle turning it clockwise

with a 5 mm Allen key (not supplied) with a 10 Nm torque.

Check the proper tightening of the axle periodically.



**X-Lock 12 & 15 mm  
front Thru Axle  
is 100% Made in Italy**

**Carbon-Ti**  
by LLS Titanium srl

Via per Ospitaletto, 147  
25046 Cazzago S.Martino  
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

Sito web: <http://www.carbon-ti.com>

e-mail: [info@carbon-ti.com](mailto:info@carbon-ti.com)