CARBON-TI

X-ROTOR CENTER LOCK ADAPTER KIT

ITALIANO

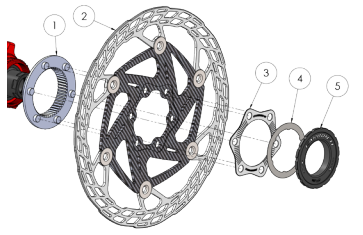

INSTALLAZIONE

Posizionare la flangia dentata (1) nella specifica sede del corpo mozzo con i sei perni rivolti verso l'esterno, inserire il disco (2) in questi ultimi facendoli combaciare con le forature.
Montare la piastra di protezione in titanio (3) nell'apposita sagomatura del disco avendo cura di orientare le scritte laserate verso l'esterno.
Avvitare l'X-Rotor Center Lock Ring (5) con il suo rasamento in acciaio (4) utilizzando una chiave chiusa per movimenti centrali Hollowtech II o simili (es. Park Tool BBT-69.4 Tool) ad una coppia di serraggio di 40 Nm.

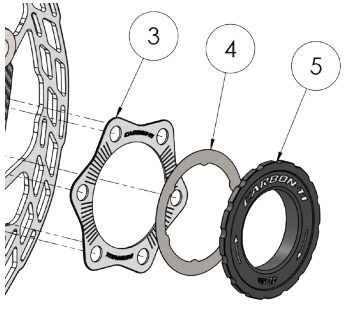

Carbon-Ti X-Rotor Center Lock Adapter Kit é 100% made in Italy

CARBON-TI
Via privata G. Castellini, 2
25046 Cazzago S.Martino
(Brescia) – ITALY
Web site: http://www.carbon-ti.com
Email: info@carbon-ti.com

CARBON-TI

X-ROTOR CENTER LOCK ADAPTER KIT

ENGLISH

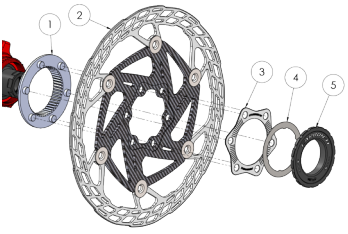

INSTALLATION

Place the toothed flange (1) in the specific location of the hub body with the six pins facing outwards, insert the disk (2) by matching the pins with holes.
Mount the titanium protection plate (3) in the specific shaping of the disc, taking care of pointing the laser signs outward.
Screw the X-Rotor Center Lock Ring (5) with its stainless steel shim (4) using a closed Hollowtech II BB tool or similar locked key (e.g., Park Tool BBT-69.4 Tool) at a 40 Nm torque.

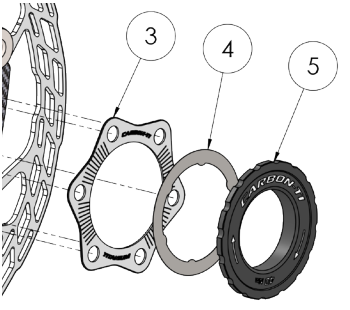

Carbon-Ti X-Rotor Center Lock Adapter Kit is 100% made in Italy

CARBON-TI

Via privata G. Castellini, 2
25046 Cazzago S.Martino
(Brescia) – ITALY
Web site: http://www.carbon-ti.com
Email: info@carbon-ti.com